

ActiveKEY®



Acceptable Operating Temperatures

The ActiveKEY® electronic key is designed to operate in temperatures between -4° and 131°F (-20° and 55°C). Low- or high-temperature conditions may shorten the battery life or cause the ActiveKEY to malfunction.

If the ActiveKEY is below 32°F (0°C) or above 113°F (45°C), the battery will not charge.

For maximum battery life, store your ActiveKEY at room temperature.

For more information on the ActiveKEY electronic key, visit the [ActiveKEY Resources](http://www.supraekey.com) page at www.supraekey.com.



Warning: *DO NOT leave an ActiveKEY in hot environments, such as a car. Temperatures in parked vehicles can exceed this range.*



10102723P1 Rev D